


N54I2

Make sure the body of the element clamp is positioned between the slits and tighten securely.

Repeat the procedure with remaining elements. Refer to **Figure 10** for clamp sizes and placement.

Continue mating the smaller elements inside the larger ones. Double-check the vertical element sections you have just assembled. Total overall length before tuning should measure 68 feet, 4 inches.

The black vinyl cap is installed on the top element section.

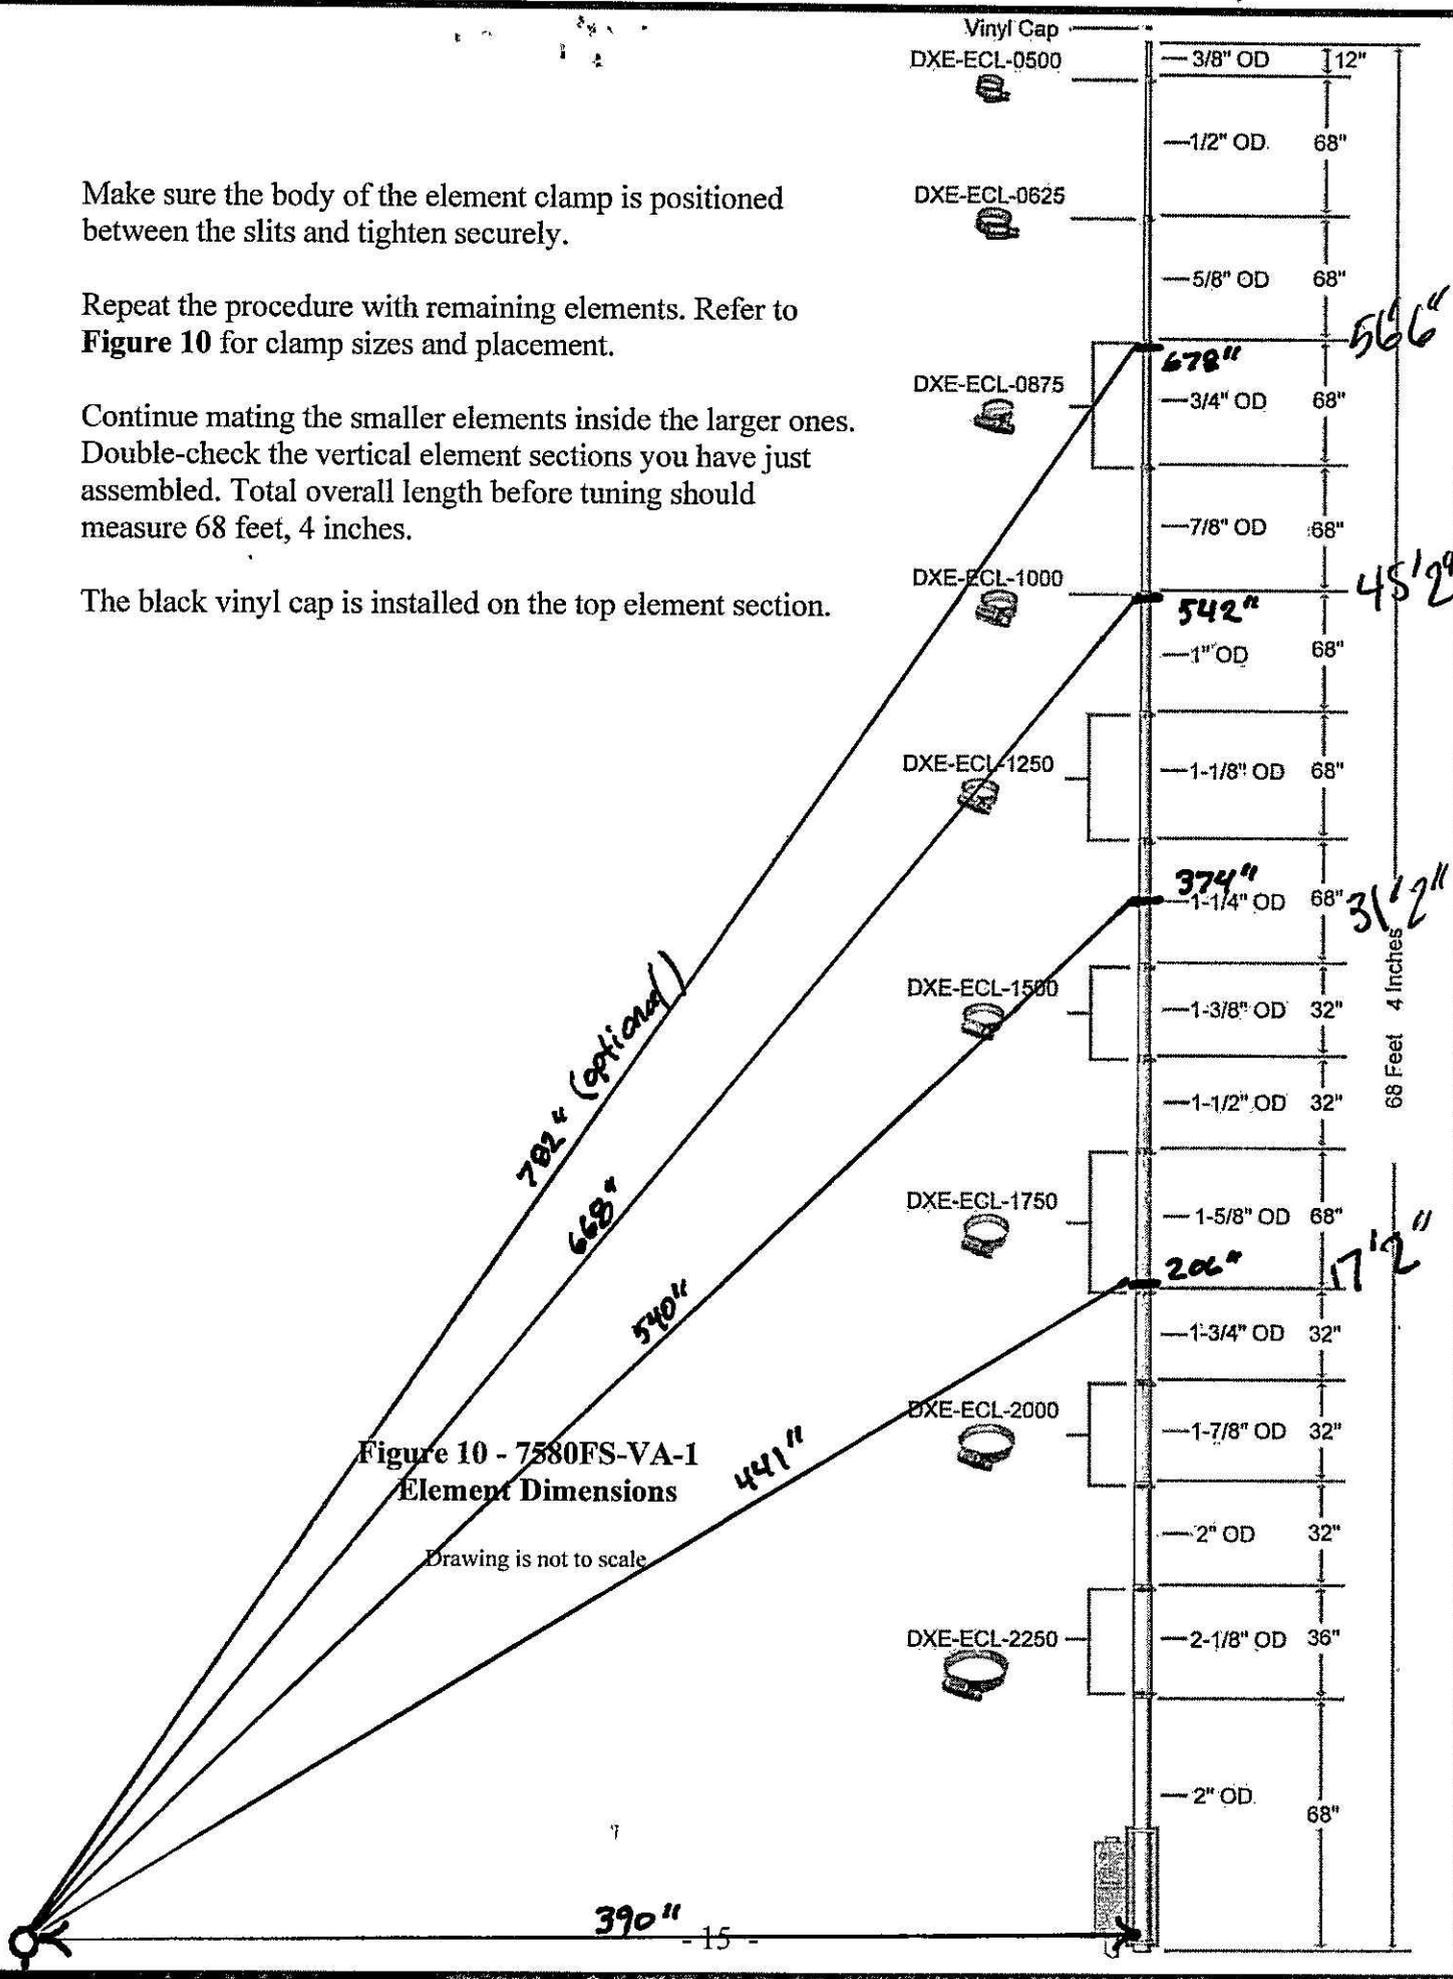

**Figure 10 - 7580FS-VA-1  
Element Dimensions**

Drawing is not to scale

